

Buildex®

NEW

FIBREGLASS TEKS®

Fixing fibreglass sheeting to steel purlins

Pre-drills its own expansion hole

Save up to 50% installation time!

- BX** *New Teks® drill point for fast and easy fastening into steel purlins from 1.2mm to 3mm thick*
- BX** *Suitable for roofing profile heights;*
 - * 18mm to 29mm (M6.5-14 x 65mm)*
 - * 40mm to 62.5mm (M6.5-14 x 85mm), depending on insulation thickness*
- BX** *Climaseal® 3 coated that meets real world testing to AS3566 Class 3*
- BX** *Industry approved Weatherlok® washers*
- BX** *Patent pending wing design drills an over sized hole into the fibreglass material - eliminates sheet buckling and water entry due to expansion in high temperatures*
- BX** *M6.5 (14g) screw with a 5/16" drive head for ease of installation*



Gauge	TPI	Length
M6.5 (14g)	14	65mm
Hex Washer Face with 32mm Weatherlok® Washer		
Part No: 6-310-0607-7CS		
Trade box of 500		

Gauge	TPI	Length
M6.5 (14g)	14	85mm
Hex Washer Face with 32mm Weatherlok® Washer		
Part No. 6-310-0626-6CS		
Trade box of 250		

Distributed By:

AMPELITE

Ampelite Australia Pty. Ltd.
Cnr Kitchen & Zenith Roads
Dandenong Vic 3175

www.ampelite.com.au
PH: 1800 800 094

Buildex[®]

FIBREGLASS TEKS[®]

Fixing fibreglass sheeting to steel purlins

Installation Instructions



Step 1:


Insert Fibreglass-Teks[®] into 5/16 socket and firmly position screw in centre of sheet crest* to prevent any skidding or scratching.

* Suitable for roofing profile heights 18mm to 29mm (M6.5x65mm) & 40mm to 62.5mm (M6.5x85mm)



Step 2:

Using a variable speed screw gun, start drilling slowly keeping screw straight to give you the correct oversized hole in your fibreglass material

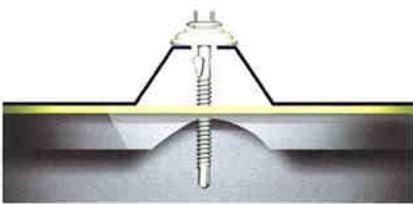

Step 3:

Keep driving screw until it engages into steel purlin* and Weatherlok[®] washer sits securely. Do not over tighten screw.

* Suitable for purlins 1.2mm to 3mm thick



No predrilling required



WARNING:
Always wear safety glasses installing this product.



Always check with material supplier recommendations for number of fasteners and spacing's required.

Distributed By:



Ampelite Australia Pty. Ltd.
Cnr Kitchen & Zenith Roads
Dandenong Vic 3175
www.ampelite.com.au

Victoria & Tasmania
PO Box 4263
Dandenong South
VIC 3164
Tel: (03) 9794 0977

New South Wales
PO Box 4186
Tregear NSW 2770
Tel: (02) 9625 7200

Queensland
21-23 Cronulla Court
Slacks Creek,
QLD 4127
Tel: (07) 3808 6211

South Australia
3 E.W. Pitts Avenue
Cavan SA 5094
Tel: (08) 8260 7391

Western Australia
91 Excellence Drive
Wangara WA 6065
Tel: (08) 9302 6833

Teks, Weatherlok and Climaseal are registered Buildex[®] Trademarks.

Whilst every care was taken in preparation of this guide, Buildex[®] accepts no responsibility for the accuracy of the information supplied.

Copyright © 2007.

The contents of this brochure are the exclusive copyright of Buildex[®] and may not be reproduced without written permission.